




Champion Power Equipment, Inc.

MODEL #201323

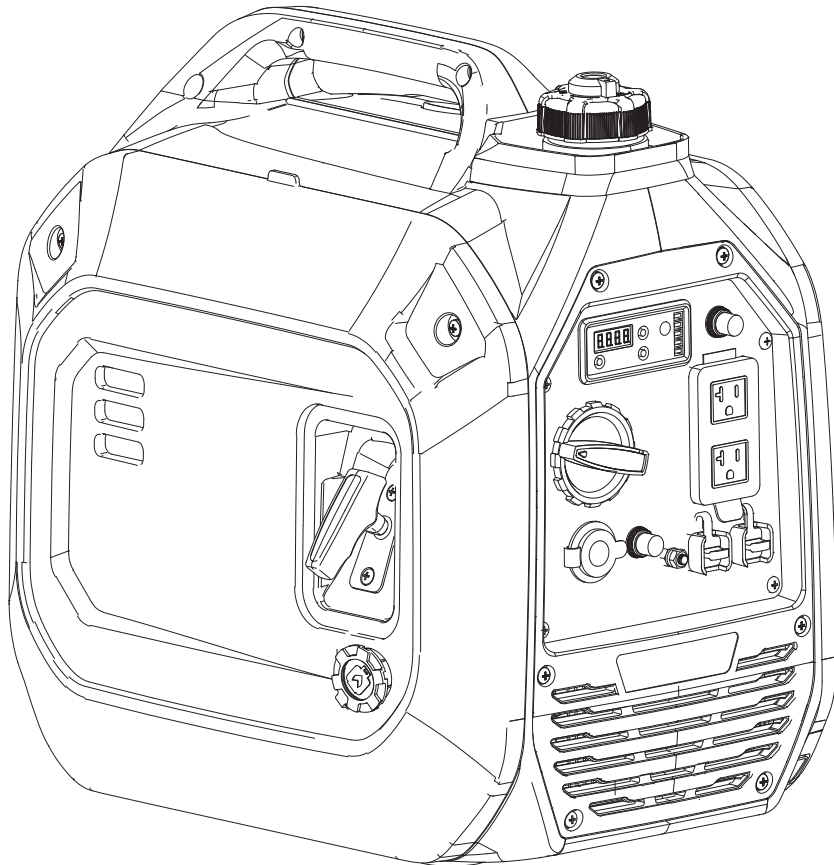

PARTS INFORMATION

2500W DUAL FUEL INVERTER GENERATOR

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Generator Parts Diagram..... 3

Generator Parts List 4

Engine Parts Diagram 6

Engine Parts List 7

Cylinder Head Parts Diagram 9

Cylinder Head Parts List 10

Carburetor Parts Diagram 11

Carburetor Parts List 12

Mounting Plate Parts Diagram 13

Mounting Plate Parts List 14

Fuel Tank Parts Diagram 15


Fuel Tank Parts List..... 16

Control Panel Parts Diagram 17

Control Panel Parts List 18

Wiring Diagram 19

GENERATOR PARTS DIAGRAM

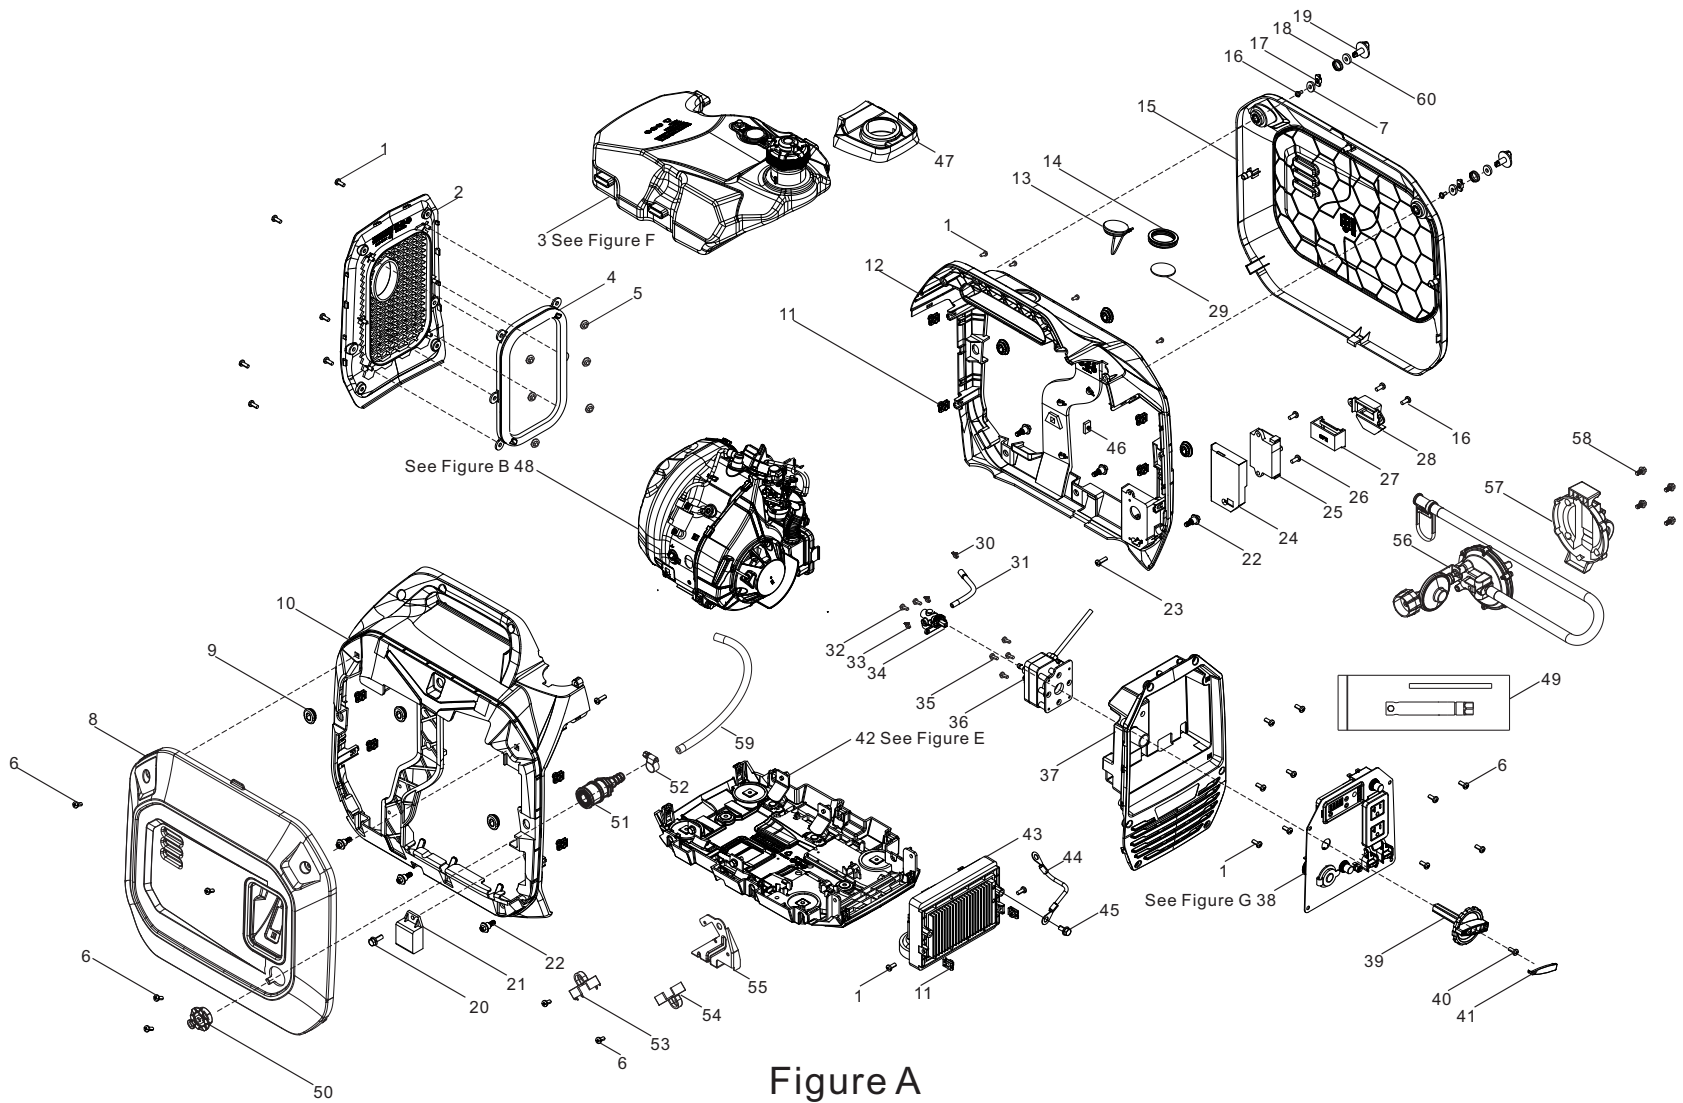


GENERATOR PARTS LIST

#	Part Number	Description	Qty.
1	90255-000004	M5 x 16 Screw & Washer Assembly	18
2	18002-000010	Muffler Louvre	1
3	96104-Y16620-0009	Fuel tank Assembly - See Figure F	1
4	18018-000002	Muffler Insulator Glue Cushion	1
5	37073-000001	Spring Clip	6
6	90255-000003	M5 x 12 Screw & Washer Assembly	10
7	90408-000002	Flat Washer	2
8	80092-000031	Left Cover Board	1
9	16601-000005	Vibration Mount, Fuel Tank, Ø13 × 17	6
10	80091-000009	Left Shell	1
11	17199-000003	M5 Clip Nut	10
12	80095-000010	Right Shell	1
13	30431-000004	Rubber Sleeve, Ø30 × Ø41.7 × 87.5	1
14	30431-000005	Rubber Sleeve, Ø30 × Ø40 × 9.8	1
15	80096-000030	Right Cover Board	1
16	90124-000002	Self Tapping Screw, PT4 x13	4
17	24329-000003	Block	2
18	16527-000003	Stopper Adjusting Spring	2
19	35643-000005	Engine Switch Dial Knob	2
20	90001-000022	M6 x 16 Hexagon Flange Bolt	1
21	30060-000023	Regulator, 12VDC Automotive	1
22	90208-000003	M6 x 20 Hexagonal Step Bolt	3
23	90129-000001	Cross Recess Countersunk Head Tapping Tcrew, ST3.2 × 10	1
24	16673-000004	Shield	1
25	35720-000004	CO Alarm	1
26	90107-000002	Self Tapping Screw, PT4.2 × 13	2
27	90722-000022	CO Sensor Plug	1
28	30079-000004	CO Sensor Plate	1
29	37205-000001	Fuel Level View, Fuel Gauge	1

#	Part Number	Description	Qty.
30	90685-000007	Clamp, Ø9.5 × 0.8 × 8	1
31	90686-000053	Fuel Tube, Ø4.5 × Ø8.5 × 220	1
32	90255-000001	M4 x 10 Screw & Washer Assembly	2
33	90685-000013	Clamp, Ø8.5 × 0.6 × 8	2
34	16750-000021	Fuel Switch Assembly	1
35	90129-000002	Cross Recess Countersunk Head Tapping Tcrew, ST4.2×16	4
36	35160-000020	Engine Switch Dial	1
37	35680-000025	Panel Seat	1
38	96119-Y35610-0005	Control Panel Assembly - See Figure G	1
39	35643-000015	Engine Switch Dial Knob	1
40	90103-000006	Cross Recess Pan Head Screw, M4 × 16, White Zinc	1
41	82007-000005	Decorative Cover	1
42	96103-Y51100-0018	Mounting Plate Assembly, Engine - See Figure E	1
43	30043-000034	Inverter, 1.9KW	1
44	30009-000015	Grounding Wire	1
45	90001-000016	M6 x 10 Hexagon Flange Bolt	1
46	50033-000002	Cushion Rubber	1
47	16641-000005	Rubber Sleeve, Filling Fuel Hole	1
48	96100-80MNI400-01	Engine, 79cc	1
49	93130-000002	Spark Plug Wrench	1
50	90722-000010	Gas Plug	1
51	16021-000001	Inlet Connection	1
52	90748-000002	Clamp, Ø10-Ø16	2
53	35192-000001	Microswitch Support, Left	1
54	35192-000002	Microswitch Support, Right	1
55	51124-000021	Mounting Bracket	1
56	77100-000014	LPG Regulator, auxiliary	1

#	Part Number	Description	Qty.
57	51136-000001	Regulator Mounting Plate	1
58	90001-000019	M6 x 12 Hexagon Flange Bolt	4
59	30431-000030	Rubber Sleeve, Ø18 × Ø31 × 300	1
60	90408-000025	Flat Washer, Ø8.4 × Ø22 × 1.6	2

ENGINE PARTS DIAGRAM

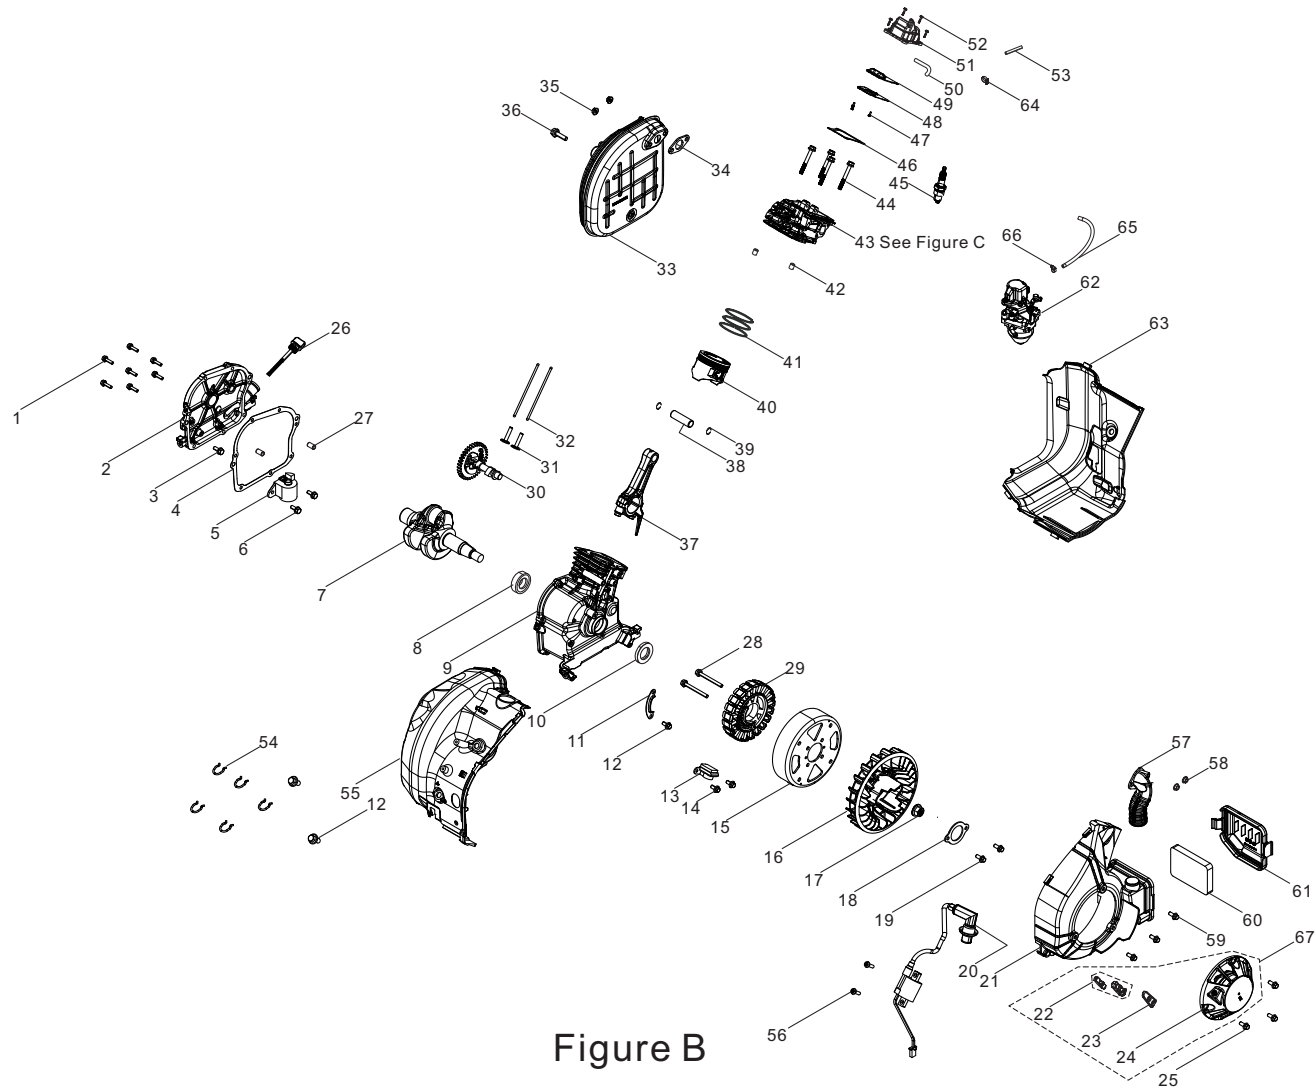

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	90007-000025	M6 x 22 Hexagon Flange Bolt	7
2	11411-000026	Crankcase Cover	1
3	90007-000029	M6 x 10 Hexagon Flange Bolt	1
4	11001-000015	Crankcase Gasket	1
5	37060-000012	Engine oil Sensor, W/O Nut	1
6	90007-000010	M6 x 14 Hexagon Flange Bolt	2
7	13300-000041	Crankshaft Assembly	1
8	90547-000004	Bearing, 6204	1
9	11310-000034	Crankcase Subassembly	1
10	90682-000019	Oil Seal, Ø20 × Ø32 × 6	1
11	30002-000002	Magneto Wiring Clamp	1
12	90001-000018	M6 x 12 Hexagon Flange Bolt	3
13	30130-000010	Trigger	1
14	90007-000004	M5 x 16 Hexagon Flange Bolt	2
15	30110-000015	Rotor Component	1
16	19352-000018	Engine Cooling Fan	1
17	13501-000003	Flywheel Nut, M12 × 1.25	1
18	19356-000001	Cooling Fan Gasket	1
19	90001-000020	M6 x 14 Hexagon Flange Bolt	2
20	30400-000040	Ignition Coil	1
21	28110-000041	Shroud	1
22	28210-000002	Starter Rope Handle	1
23	28004-000005	Guide Plate Assembly, Starter Rope	1
24	28200-000034	Recoil Starter Assembly	1
25	90007-000011	M6 x 16 Hexagon Flange Bolt	3
26	15010-000027	Oil Dipstick Subassembly	1
27	90502-000002	Pin, Ø8 × 12	2
28	90001-000030	M6 x 30 Hexagon Flange Bolt	2
29	30120-000037	Stator Component, Ø120 × 21	1
30	14200-000027	Camshaft Assembly	1

#	Part Number	Description	Qty.
31	14081-000006	Valve Tappet	2
32	14070-000005	Valve Lifter	2
33	18100-000047	Muffler Assembly	1
34	18001-000009	Exhaust Outlet Gasket	1
35	90310-000001	M6 Hexagon Flange Lock Nut	2
36	90007-000030	M6 x 60 Hexagon Flange Bolt	1
37	13010-000017	Connecting Rod	1
38	13121-000010	Piston Pin, Ø11 × Ø8 × 37	1
39	13122-000007	Piston Pin Clip	2
40	13111-000015	Piston	1
41	13200-000017	Piston Ring Assembly	1
42	90502-000002	Pin, Ø8 × 12	2
43	96101-Z120410-0019	Cylinder Head Subassembly - See Figure C	1
44	12003-000008	M6 x 50 Cylinder Head Bolt	4
45	30010-000005	Spark Plug, A5RTC	1
46	12004-000015	Cylinder Head Cover Gasket	1
47	90103-000001	M3 x 8 Cross Recess Pan Head Screw	3
48	11332-000004	Breath Groove Cover Gasket	1
49	11320-000005	Breath Piece Assembly	1
50	17004-000023	Breather Tube, Ø7 × Ø11 × 135	1
51	12410-000016	Cylinder Head Cover Subassembly	1
52	90007-000011	M6 x 16 Hexagon Flange Bolt	4
53	30431-000031	Rubber Sleeve, Ø13 × Ø15 × 80	1
54	90740-000011	Clamp, Ø1.6	5
55	19308-000001	Body Left Shield	1
56	90107-000012	Self Tapping Screw, ST4.8 × 19	2
57	17110-000004	Inlet Pipe Assembly, Air Cleaner	1
58	90305-000007	M6 Hexagon Flange Nut	2
59	90001-000024	M6 x 20 Hexagon Flange Bolt	3
60	17151-000015	Air Cleaner Element	1

#	Part Number	Description	Qty.
61	17104-000003	Air Cleaner Case Cover	1
62	96105-Z16100-0014	Carburetor - See Figure D	1
63	19340-000011	Lower Shield	1
64	90685-000008	Clamp, Ø10.5	1
65	90729-000012	Hose, Ø9.5 × Ø16.8 × 380	1
66	90748-000002	Clamp, Ø10-Ø16	1
67	96138-Z28200-0002	Recoil Starter Assembly	1

CYLINDER HEAD PARTS DIAGRAM

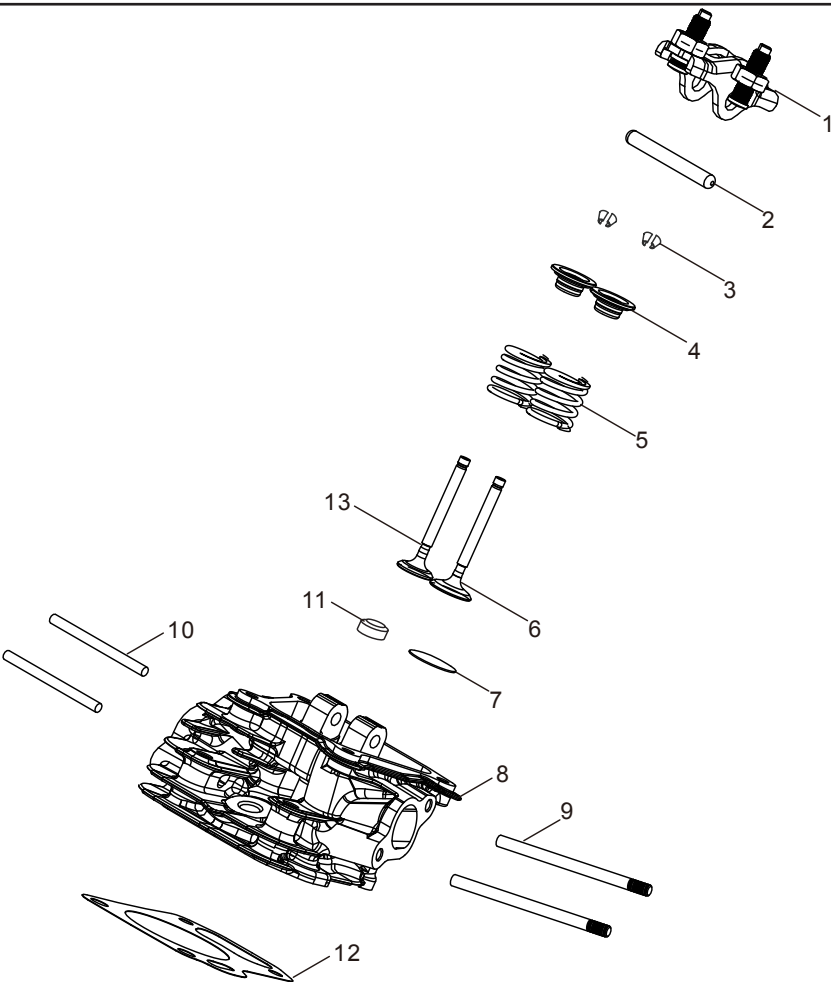


Figure C

CYLINDER HEAD PARTS LIST

#	Part Number	Description	Qty.
1	14310-000011	Valve Rocker Assembly	2
2	14330-000001	Rocker Shaft Assembly	1
3	12109-000004	Valve Lock Clamp	4
4	12112-000008	Valve Spring Retainer	2
5	12103-000003	Valve Spring	2
6	12111-000015	Inlet Valve	1
7	12106-000001	Valve Outer Spring Retainer	1
8	12140-000033	Cylinder Head Subassembly	1
9	90204-000021	Stud, M6 x 92	2
10	90203-000004	Stud, M6 x 75	2
11	12101-000003	Seal Guide	1
12	12131-000018	Cylinder Head Gasket	1
13	12121-000017	Exhaust Valve	1

CARBURETOR PARTS DIAGRAM

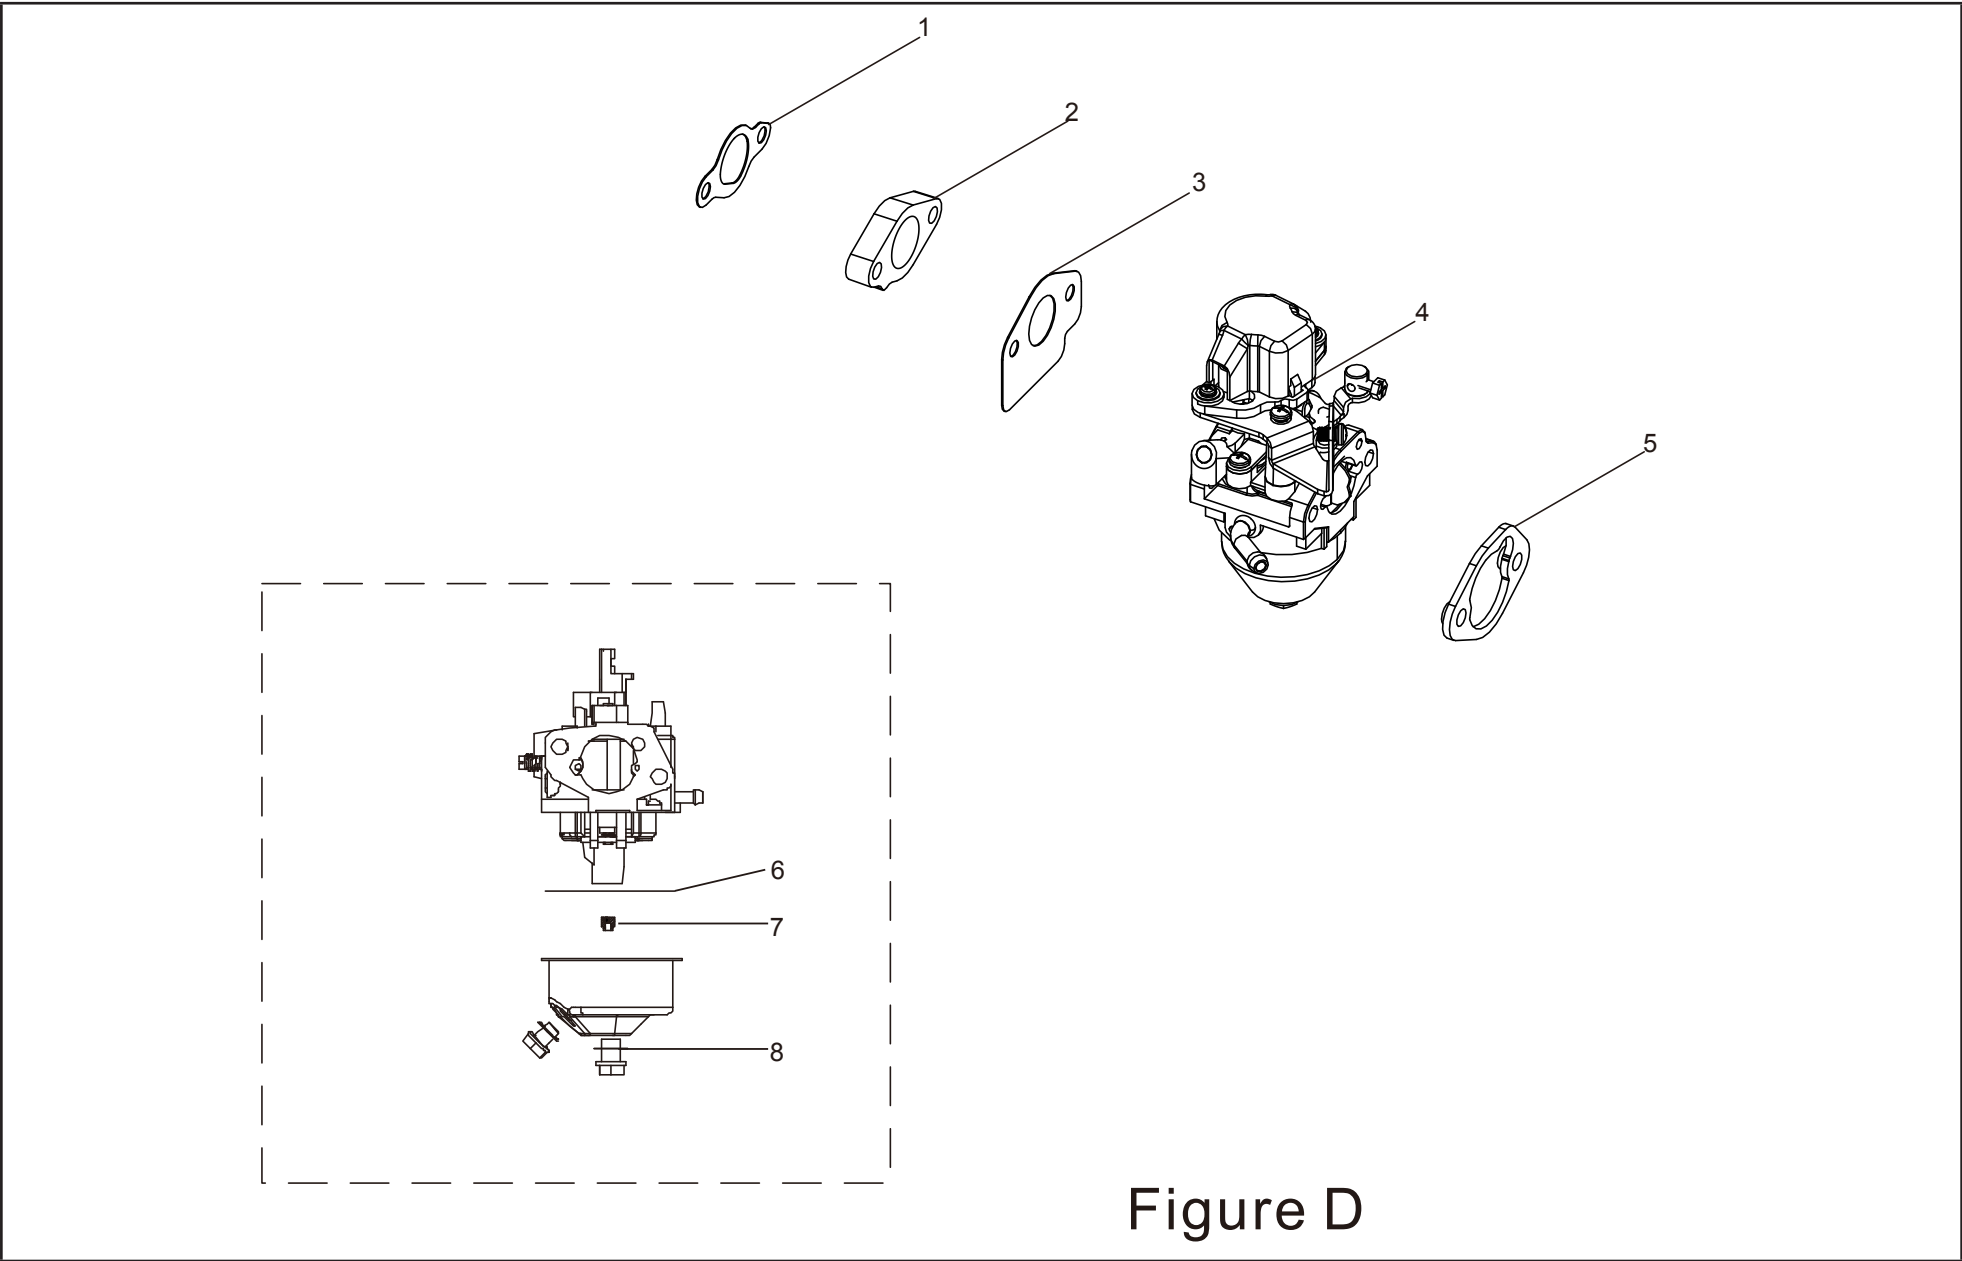


Figure D

CARBURETOR PARTS LIST

#	Part Number	Description	Qty.
1	17002-000008	Inlet Gasket	1
2	16003-000020	Carburetor Insulator Plate	1
3	16001-000008	Carburetor Gasket	1
4	16100-000074	Carburetor Assembly	1
5	17001-000014	Air Cleaner Gasket	1
6	16112-000001	Seal Ring, Float	1
7	16161-000013	Main Jet (62#), Standard	1
	16161-000011	Main Jet (60#), Altitude 3000-6000 Feet	/
	16161-000046	Main Jet (58#), Altitude 6000-8000 Feet	/
8	90681-000003	Seal Ring	1

MOUNTING PLATE PARTS DIAGRAM

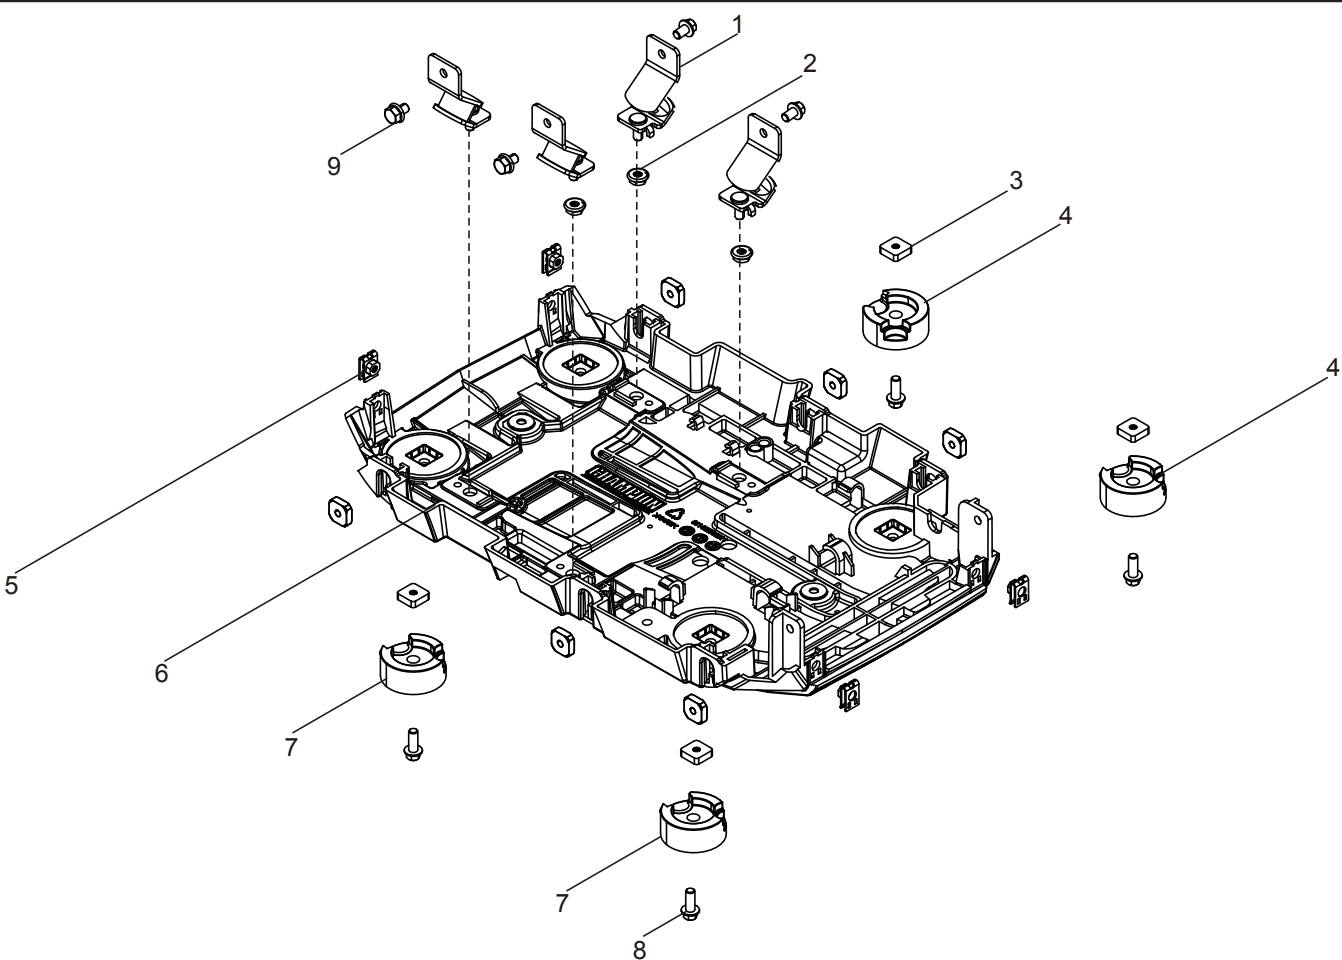


Figure E

MOUNTING PLATE PARTS LIST

#	Part Number	Description	Qty.
1	51005-000012	Vibration Mount , Frame	4
2	90305-000007	M6 Hexagon Flange Nut	4
3	90326-000001	M6 Square Nut	10
4	51014-000010	Rubber Foot, Right	2
5	17199-000003	M5 Clip Nut	4
6	51143-000009	Bottom Plate	1
7	51014-000009	Rubber Foot, Left	2
8	90001-000022	M6 x 16 Hexagon Flange Bolt	4
9	90001-000020	M6 x 14 Hexagon Flange Bolt	4

FUEL TANK PARTS DIAGRAM


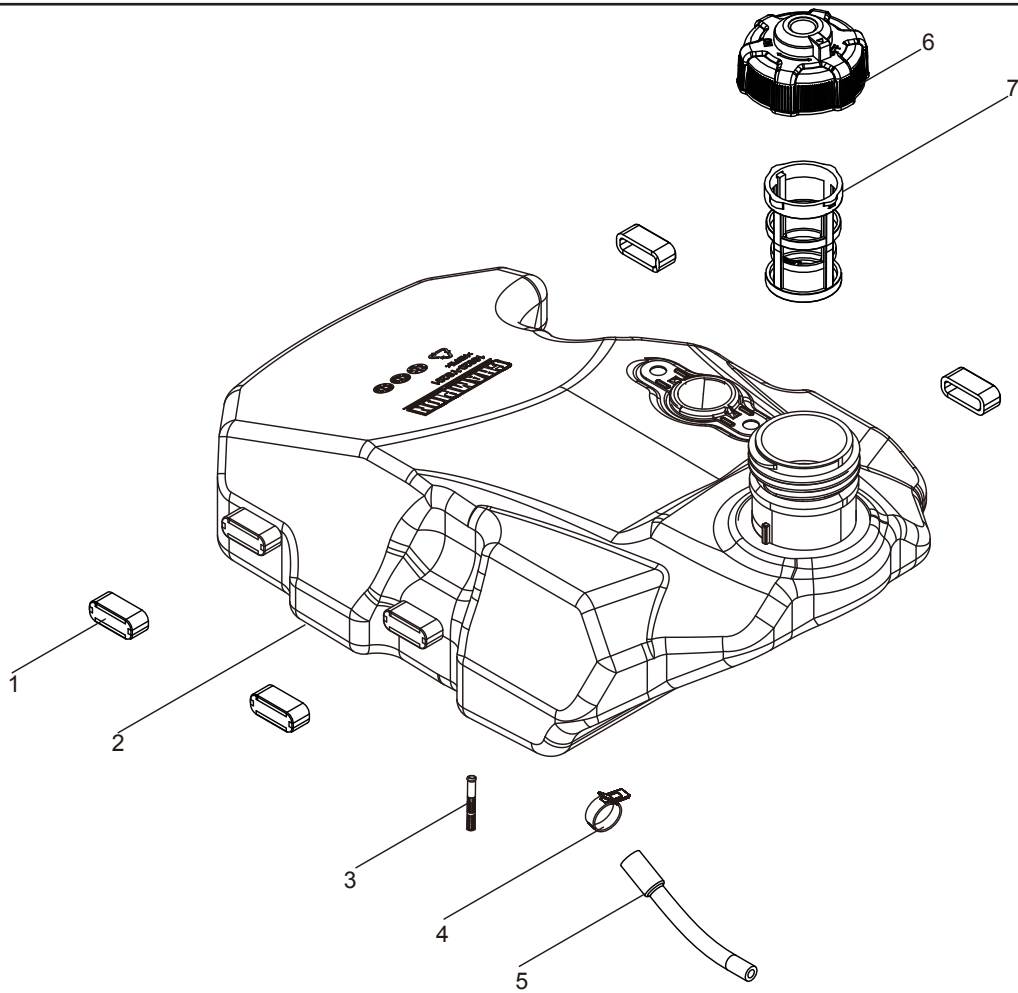


Figure F

FUEL TANK PARTS LIST

#	Part Number	Description	Qty.
1	90683-000004	Bushing	4
2	16620-000054	Fuel Tank	1
3	16514-000001	Filter Element, Fuel Tank	1
4	90685-000010	Clamp, Ø10.5 x 8 x 0.8	1
5	90686-000054	Fuel Tube, Ø4.5 x Ø8.5 x 90	1
6	16730-000012	Fuel Tank Cap	1
7	16652-000018	Fuel Filter	1

CONTROL PANEL PARTS DIAGRAM

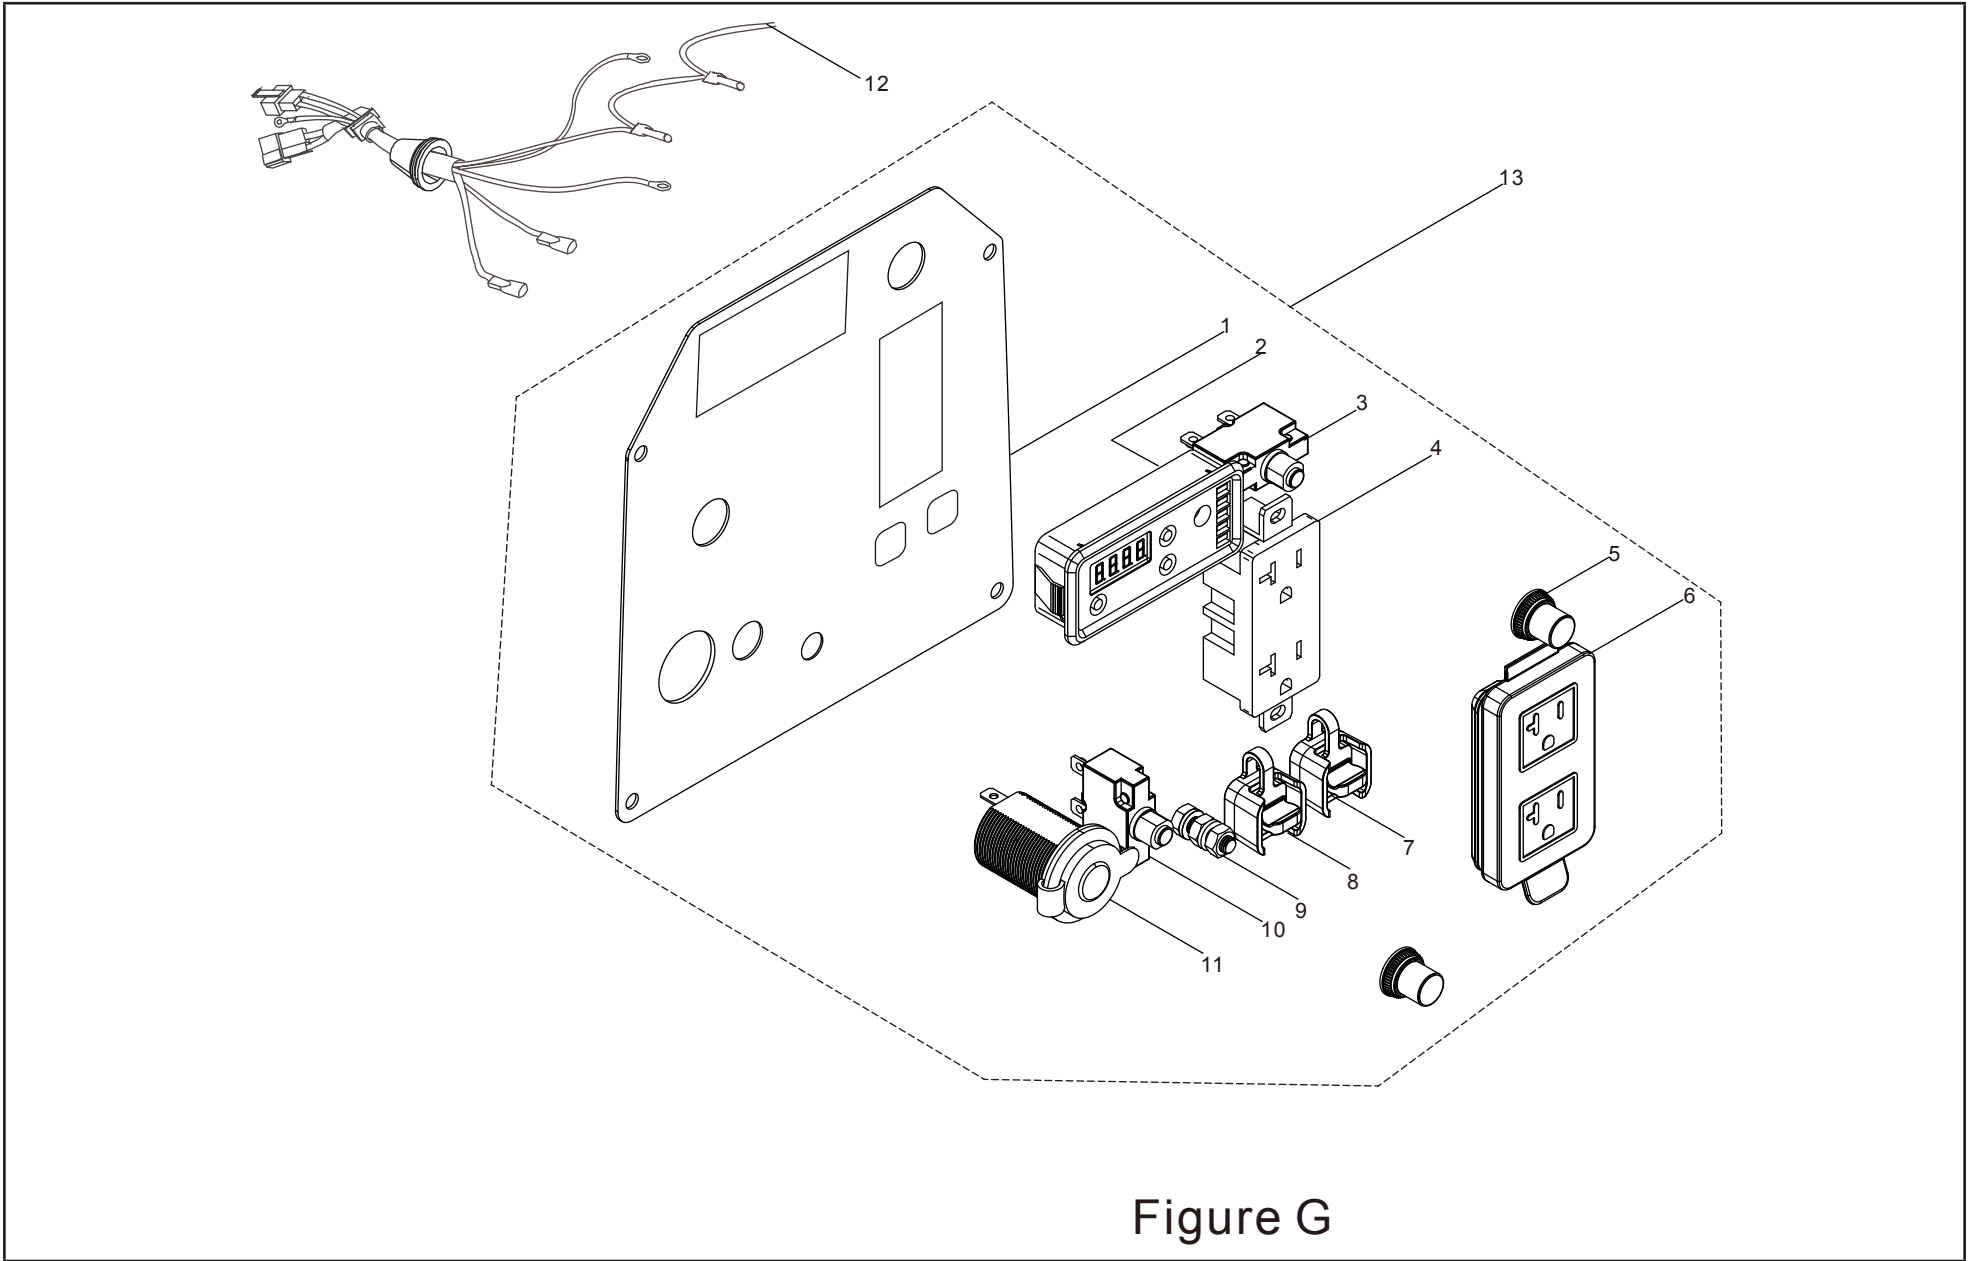

CONTROL PANEL PARTS LIST

#	Part Number	Description	Qty.
1	35650-000048	Control Panel	1
2	35632-000020	Intelliguage, INT5CINV	1
3	31234-000004	20Amp Circuit Breaker, Push Button, 125/250V	1
4	35614-000017	Receptacle, 20A/125V	1
5	35654-000005	Receptacle Cover, Circuit Breaker	2
6	35654-000013	Receptacle Cover, Circuit Breaker	1
7	35614-000020	Receptacle, 50A/1000V, Black	1
8	35614-000019	Receptacle, 50A/1000V, Red	1
9	35629-000001	Grounding Terminal	1
10	31234-000002	8Amp Circuit Breaker, Push Button, 125/250V	1
11	35619-000003	Automotive Receptacle, 12V DC	1
12	35660-000058	Wire Harness, Control Panel	1
13	35610-000162	Control Panel Assembly	1

WIRING DIAGRAM

